

PRE16/26

AUDAC

PROFESSIONAL AUDIO EQUIPMENT

PRE16/26 6 Channel Pre-Amplifier – Single/Double Output Zone



User Manual & Installation Guide

AUDAC PROFESSIONAL AUDIO EQUIPMENT

User Manual & Installation Guide

© AUDAC
<http://www.audac.eu>
info@audac.eu

Index

INTRODUCTION	3
ENVIRONMENT	4
SAFETY REQUIREMENTS	5
CAUTION – SERVICING.....	5
OVERVIEW FRONT AND REAR PANEL	6
FRONT.....	6
REAR	6
OVERVIEW INPUT CONTROLS	7
INPUT (FRONT).....	7
OVERVIEW OUTPUT CONTROLS	7
OUTPUT (FRONT).....	7
FRONT PANEL DESCRIPTION	8
OVERVIEW INPUT CONNECTIONS	9
INPUT (REAR).....	9
OVERVIEW OUTPUT CONNECTIONS	9
OUTPUT (REAR).....	9
REAR PANEL DESCRIPTION	10
CONNECTIONS AND CONNECTORS	11
GETTING STARTED	12
BLOCK DIAGRAM	13
ADDITIONAL INFORMATION	14
TECHNICAL SPECIFICATIONS	14
PERSONAL NOTES	15

Introduction

This section briefly describes the possibilities of the PRE16/26 Preamplifier.

The PRE16/26 Preamplifier was developed as an easy to use, flexible solution for multifunctional use.

During the development of the PRE16/26, the AUDAC-engineers wanted to achieve four goals:

- Delivering a flexible audio solution to control multiple functions
- Easy to use
- Excellent sound quality
- Modern and advanced design

The Audac PRE16/26 stereo preamplifiers are designed to be used in combination with the Audac D, T, Q and CPA Series Amplifiers, but can also be used for various other applications. It has 2 balanced XLR microphone inputs which are both equipped with a gain control, a 3-band tone control, phantom power and a talk over function.

Channel 1 is constructed as a balanced stereo line input channel, fitted with 2 balanced XLR connectors, a stereo/mono switch and a gain control.

Channels 2, 3 and 4 are constructed as unbalanced stereo line input channels, each fitted with 2 RCA/Cinch connectors and a gain control. The output section features 2 balanced XLR connectors and a stereo/mono switch for every output zone.

The PRE16/26 can be used in commercial applications such as restaurants, hotels, shops, warehouses, professional offices, public buildings, and many more.

Environment

Do not place this unit in an enclosed environment such as a bookshelf or closet. Ensure that there is adequate ventilation to cool the unit.

Do not place the unit in environments which contain high levels of dust, heat, moisture or vibration.

Do not use the unit near water or other liquids. Make sure no water or other liquids can be spilled, dripped or splashed on the unit.

This unit was developed for indoor use only. Do not use it outdoors.

Do not place objects on top of the unit.

Place the unit on a stable base or mount it in a stable 19" rack.

Safety Requirements


Always handle the unit with care.

Only use a grounded socket outlet and a power cord with grounding plug to plug in the unit.

This unit is not a toy. It should not be operated by children.

Do not stick objects through the openings.

Do not open the unit (risk for electrical shock).

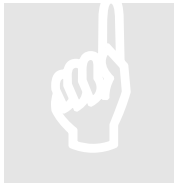

CAUTION – SERVICING

This unit contains no user serviceable parts. Refer all servicing to qualified service personnel. Do not perform any servicing unless you are qualified to do so.

Note


This product conforms to the following European Standards: EN 50081-1: 1992, EN 50082-1: 1992, EN 60065: 19

Chapter

2

Overview front and rear panel

FRONT PANEL

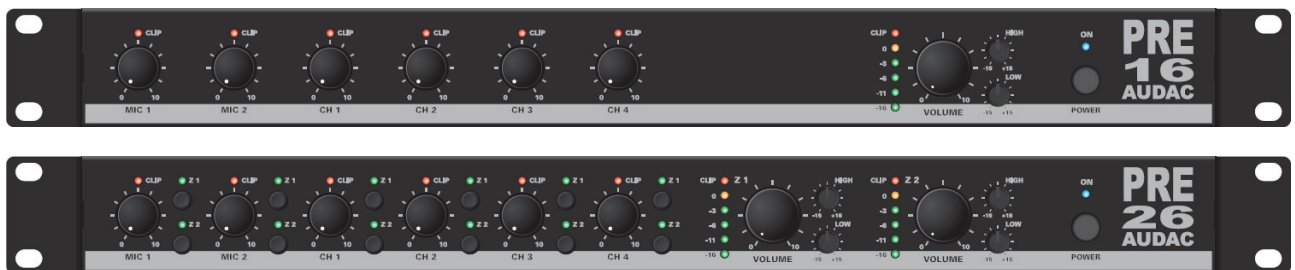


REAR PANEL



Details front and rear panel


Overview Input Controls

INPUT (FRONT)

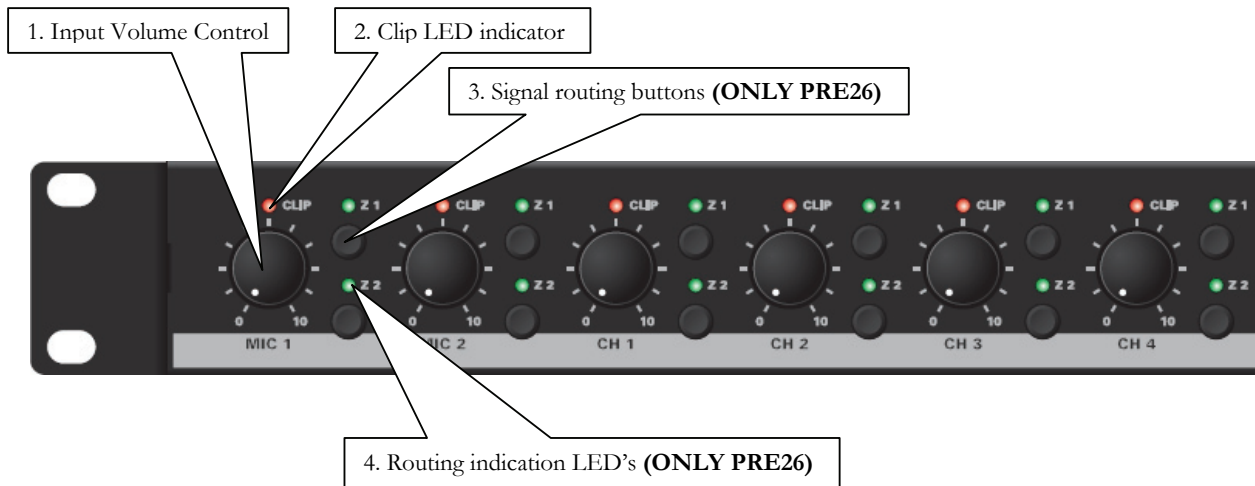

Overview Output Controls

OUTPUT (FRONT)

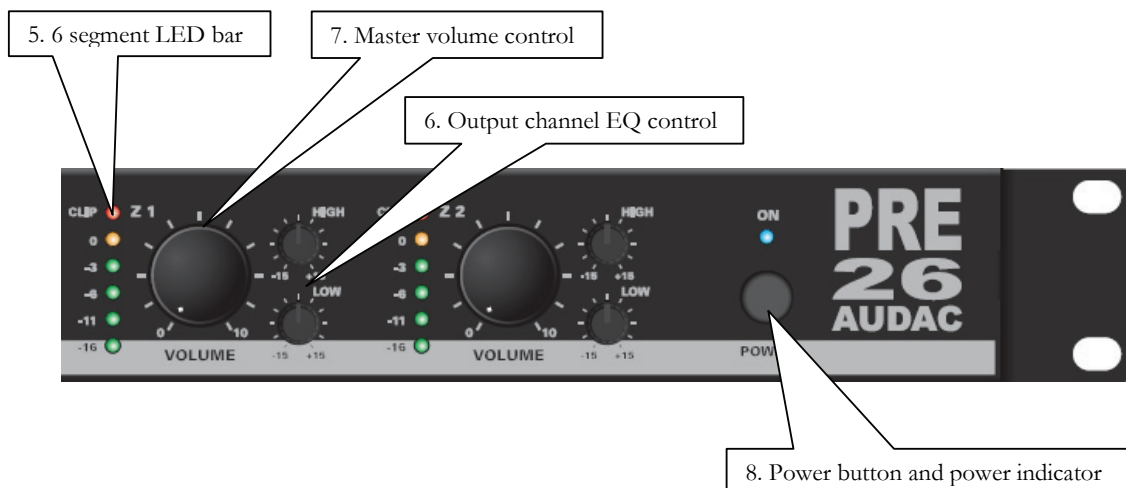

Front panel description

1. Input Volume Control:

The Input Volume Control knobs allow you to adjust the individual level for each input channel.

2. Clip LED indicator:

These indicator LED's warn against clipping on the input signal. When the clip LED indicator is flickering, the input signal level is 3dB below clipping level and the gain control potentiometer on the back of the amplifier has to be reduced.

3. Signal routing buttons (ONLY PRE26):

These buttons allow you to select the routing of every input channel to one or both output channels. By pressing this button, the corresponding input signal will be routed to the selected output zone. By pressing the same button again, the routing of the signal will be repealed.

4. Routing indication LED's (ONLY PRE26):

These LED's indicate to which output zones the corresponding input signal is routed. The Z1 LED represents Output 1, and Z2 represents Output 2.

5. 6 Segment LED bar:

This LED bar indicates the level of the output signal for the corresponding output zone.

6. Output channel EQ control:

Every output channel has a two band tone control whereby specific frequency ranges of the signal can be amplified or attenuated. It can be adjusted over a range of ± 15 dB.

7. Master volume control:


With this knob, the overall volume of the corresponding output channel can be adjusted.

8. Power button and power indicator LED:

The power switch has to be used for turning the device on/off. A blue power indicator LED lights up when the PRE16/26 is turned on.


Overview Input Connections

INPUT (BACK)

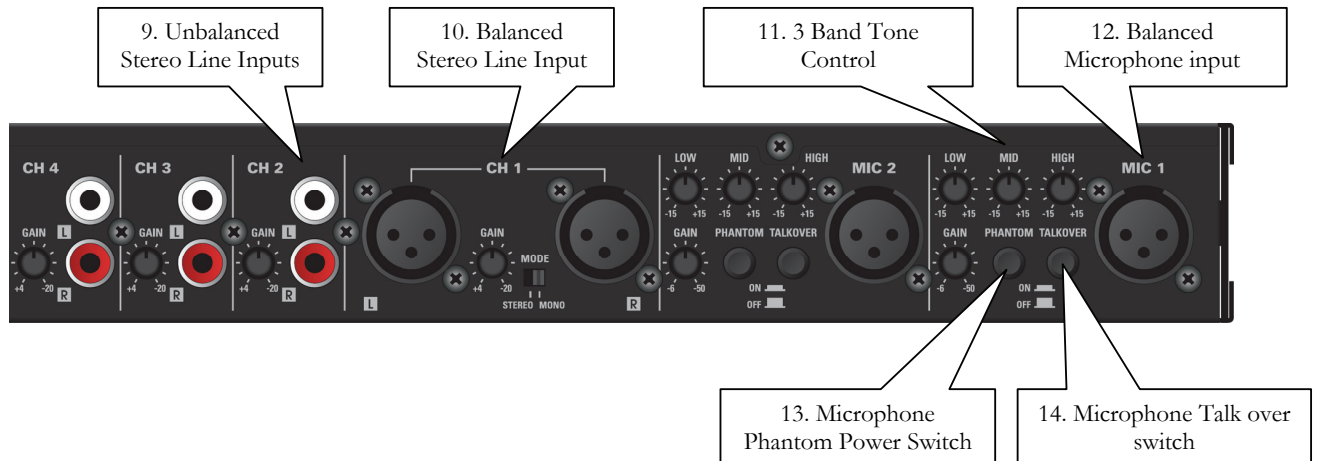

Overview Output Connections

OUTPUT (BACK)

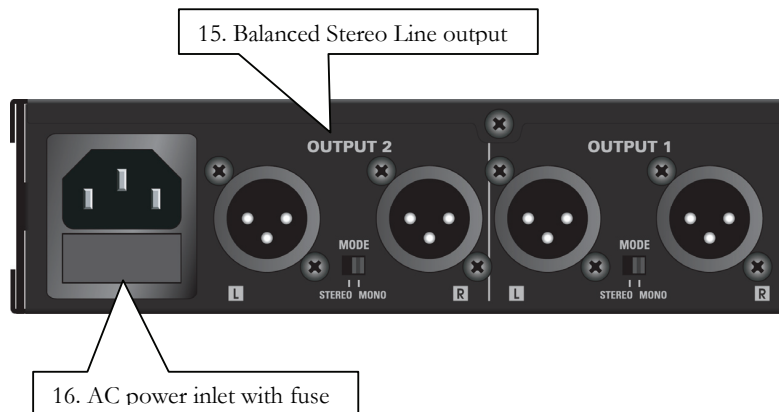

Rear panel description

9. Unbalanced stereo line inputs:

These unbalanced line level inputs can be connected to equipment with unbalanced line level outputs. A gain control potentiometer is provided to control the level of the input signal. There are three stereo unbalanced line inputs available on the PRE16/26.

10. Balanced stereo line input:

The balanced stereo line input allows connecting a music source with balanced line outputs. A gain control potentiometer is provided to control the level of the input signal and a mono/stereo switch allows to select the output mode. When switched to mono, the stereo signals are mixed to mono and are available on both Left and Right output channels.

11. 3 Band tone control:

Every microphone input channel has a separate three band tone control, whereby specific frequency ranges of the signal can be amplified or attenuated. It can be adjusted over a range of ± 15 dB.

12. Balanced microphone input:

There are two balanced microphone inputs available

13. Microphone phantom power switch:

If a microphone requires phantom power, the phantom power switch of the corresponding Mic channel can be switched ON. This applies +15 V DC phantom power to the microphone.

14. Microphone talk over switch:

When the talk over switch is turned ON, all other connected music sources will be suppressed when a signal is present at the corresponding Mic channel. This function is mainly used for paging purposes.

15. Balanced stereo line output:

The output zone(s) have balanced stereo XLR output terminals. The main amplifier can be connected to these output terminal.

16. AC power inlet with fuse:

The mains power supply (110~240V AC / 50~60 Hz) has to be applied to this AC power inlet. The connection is made by an IEC power connector and is fitted with a fuse. When replacing the fuse, make sure that the value of the replacement fuse matches the value of the original fuse (500 mA / 250V).

Connections and Connectors

The in- and output connections of AUDAC audio equipment are performed corresponding to international wiring standards for professional audio equipment.

Cinch (RCA):

tip = signal (left or right)

ring = ground

 
XLR:

1 = ground / shield


2 = +sig

3 = -sig

XLR female:



XLR male:

 

6.3mm (1/4") balanced jack plug:

tip = +sig

ring = -sig

sleeve = ground / shield

6.3mm (1/4") unbalanced jack plug:

tip = signal

sleeve = ground / shield


Getting Started

The PRE16/26 Preamplifier can be switched on by pressing the power button on the front panel. The blue < ON > LED will light up if the device is powered-up.

On the front panel, every channel has a Clip LED indicator to control the input levels. Each input channel also features 2 buttons and a series of green indication LED's to control the routing of the input signal (**Only PRE26**). For the output section, every zone has its own 6 segment LED bar, master volume control knob and 2 band control knobs to control the output signal.

The volume of the input signals can be controlled by turning the volume knobs of the input signals on the front panel of the PRE16/26. The master volume knob and the 2 band tone control knobs allow you to adjust the volume, bass and treble of the output signal. A VU-bar indicates the signal level of the output signal.

Block Diagram

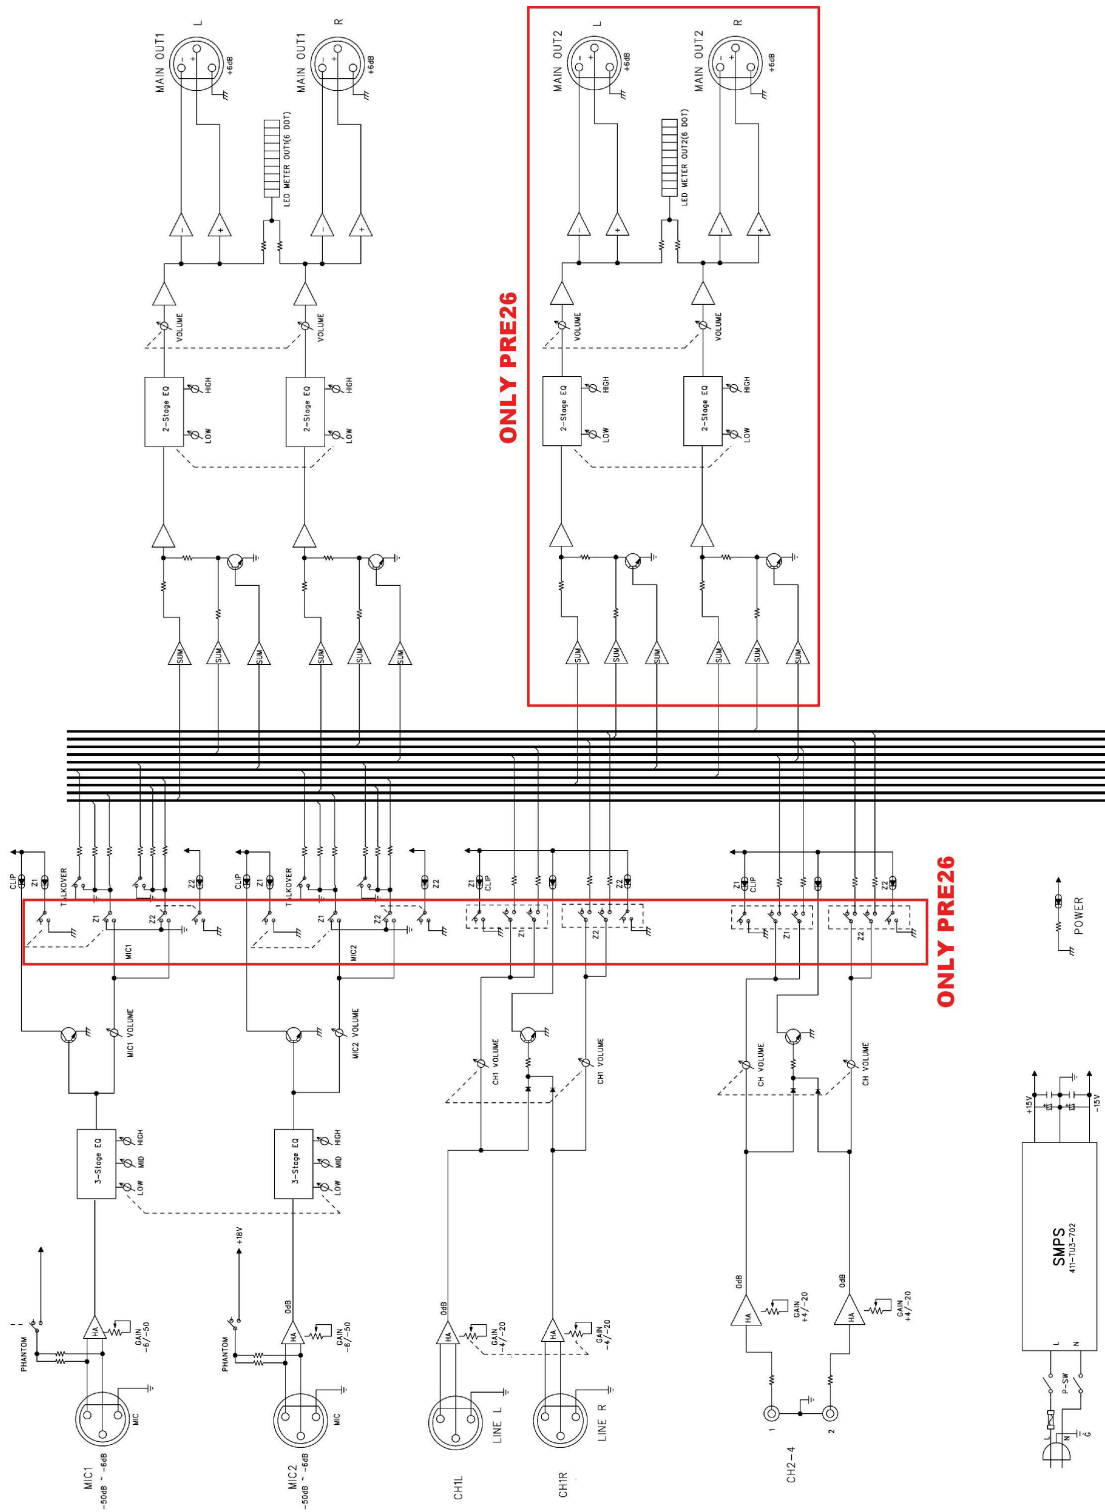

Additional Information

Technical specifications

Frequency response	20 Hz – 20 kHz
THD+N	< 0,1%
Residual Noise	<-75 dB
Signal to noise ratio	> 90 dB
Crosstalk	<-75 dB
Tone Control	±15 dB
Input sensitivity	Mic 1 - 2: 1,0 mV
	Ch 1: 200 mV
	Ch 2 - 4: 200 mV
Input impedance	Mic 1-2: 600 Ohm balanced XLR
	Ch 1: 2 x 600 Ohm balanced XLR
	Ch 2-4: 47kOhm unbalanced RCA/Cinch
Output level	1,2 V
Output impedance	2 x 600 Ohm balanced XLR (PRE16)
	4 x 600 Ohm balanced XLR (PRE26)
Phantom power	15V DC ± 3V
Power supply	110~240V AC / 50~60 Hz
Power Consumption	12 Watt
Construction	Steel
Mounting	19" Rack
Dimensions (W x H x D)	482 x 325 x 44 mm
Unit Height	1 HE
Color	Black

Personal notes